


michael miller FABRICS

## MAKING IT FUN MASK PANEL | DCX9927 MULTI

SHIPPING OCTOBER 2020

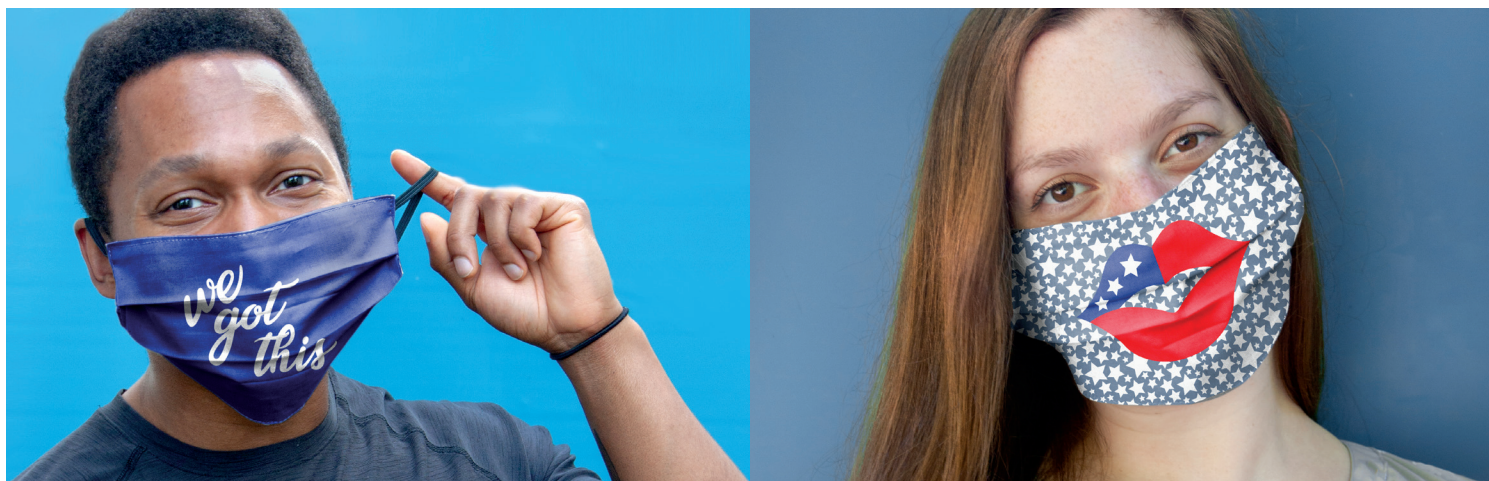

We're bringing the fun to mask making with this quirky mask panel! 24 awesome designs can be made into 12 reversible face masks or pair these designs with our basic prints like Cotton Couture and Coco to create 24 masks. We got you covered! See reverse or visit [www.michaelmillerfabrics.com](http://www.michaelmillerfabrics.com) for free project instructions. Video tutorial will also be available on our Making It Fun with Rob Appell Youtube Channel.

# DIY MASK INSTRUCTIONS

## MATERIALS:

Two 6" x 9-1/2" cotton fabric rectangles cut from mask panel, 2 pieces of elastic (6" ea)

You will also need - sewing machine, scissors, iron, 2-4 pins or clips to hold fabric in place

## SEWING AND IRONING INSTRUCTIONS:

1. Iron under all 4 sides of both pieces. I will use the 3/8" seam measurement.

\*SEE BELOW OPTION FOR SIZING AT THE END.

Seams are ironed to the WRONG side of the fabric. SEE FIGURE 1

2. Layer the rectangles, right side on top with wrong sides touching. Folded ends are touching each other. Match well and pin or clip down. SEE FIGURE 2

3. Topstitch around, inserting elastic as you go. Elastic will be about 1/4" from corners on short ends. SEE FIGURE 3. See \*\* for insert option before topstitch.

4. Finish by folding in pleats – iron or by eye fold down 1-1/2" from top to make a 1/2" pleat and make second pleat half an inch below. Sew down pleats and this will also catch the elastic for an extra hold. SEE FIGURE 4.

\*For sizing options use the following as your ironing measurement according to size preferred.

1/4" larger adults

3/8" standard for most adults

1/2" standard for small adults

3/4" for young teens

1" for kids (you may want to trim away 1/2" from all sides before ironing).

Adjust elastic length if needed.

\*\*If you would like to use a disposable paper towel as insert option for less washing after use, leave a 4" unsewn opening in the bottom of the mask for easy changing and disposal of insert.

FIGURE 1

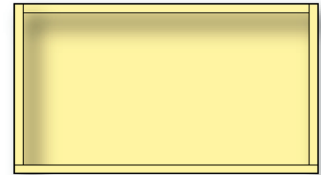


FIGURE 2



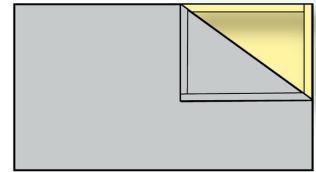


FIGURE 3



FIGURE 4

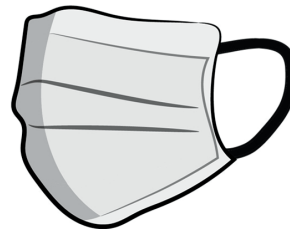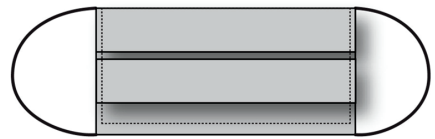

**Thank you for being safe! Enjoy the option of this mask being reversible!**

DISCLAIMER: The mask that you assemble with this panel is not a substitute for professional, medical grade Personal Protective Equipment (PPE). If you require PPE, please consult a health care professional. Cotton masks are not meant to replace other recommendations from the CDC to slow the spread of COVID-19. We make no warranties, either express or implied, that this mask prevents infection or the transmission of viruses or diseases. Make sure you follow the CDC's advice on how best to keep you and others safe.